

TRAK Machine Tools Site Preparation Guide TRAK VMC2

Service Manual Link:

https://www.southwesternindustries.com/media/manuals/34104_Manual.pdf

Programming Manual Link:

https://www.southwesternindustries.com/media/manuals/34105_manual.pdf

Before an Authorized Field Service Technician can perform the machine's final checkout, the following requirements must be met:

- The machine must be in position and its leveling pads installed.
- To move the machine while on the pallet, a 5000 lb. forklift with a 24" load center & 6' fork extensions is required. Depending on the load center or rating of the forklift, a larger forklift may be required. The center of gravity (CG) of the machine while on the pallet is ~24" from the edge of the pallet. Please see the manual for more information about lifting the machine.
- If you are lifting the machine along its length, the mill should be lifted from side of the pallet where the column is located. See the lifting images below.
- The VMC2 can be lifted from the pallet from the side and back of the machine. Once the machine is lifted from the pallet, the leveling pads must be threaded into the leveling spacers. See image below.
- A pallet jack can be purchased with each machine as an option so the user can move the machine around the shop as required. See the service manual for detailed instructions on how to move the machine.
- The machine must be wired (refer to the installation and service manual for additional information).
- The machine must have air hooked up. We strongly recommend that a water separator or air dryer be installed upstream of the VMC2 air supply.

Space & Weight

- Floor Area (W x L) = 55" x 113.5" (incl. 4" heat exchanger)
- Height = 101.5"
- Footprint (W x L) 55" x 90"
- Net (approx.) Weight = 2825 lbs.
- Shipping (approx.) Weight = 3175 lbs.
- Pallet Size = 45" x 78"
- A solid and level foundation to maintain approximately 2825 lbs. plus the weight of the workpiece is required.
- Minimum doorway width and height the VMC2 can fit through is 31" x 93". The 93" dimension includes the electrical cabinet but requires the resistor to be removed.

Electrical

- A separate 208 VAC (208 to 240 V is acceptable), 30 amp minimum, 60 Hz, 3 phase circuit is required or 480 VAC (440 to 520 V is acceptable) 15 amp minimum, 60 Hz 3 phase circuit.
- Machine can be run on single phase 208-volt but cutting capacity is reduced by 40%.
- Machine comes standard with 208-volts. 480-volts is optional and strongly recommended it be installed at factory.
- This machine is meant to be moved around the shop so the appropriate quick disconnect drops should be installed in the shop locations where the machine may be moved. See pictures below, Figure 5 shows the male plugs we provide. Female equivalent plugs are to be provided by the user.

Air

- 1/2" ID minimum air connection is required.
- Air pressure must be a minimum of 90 psi.
- Air – 2.5 CFM (at 90 psi), 18 SCFM

TRAK Machine Tools
Site Preparation Guide
TRAK VMC2

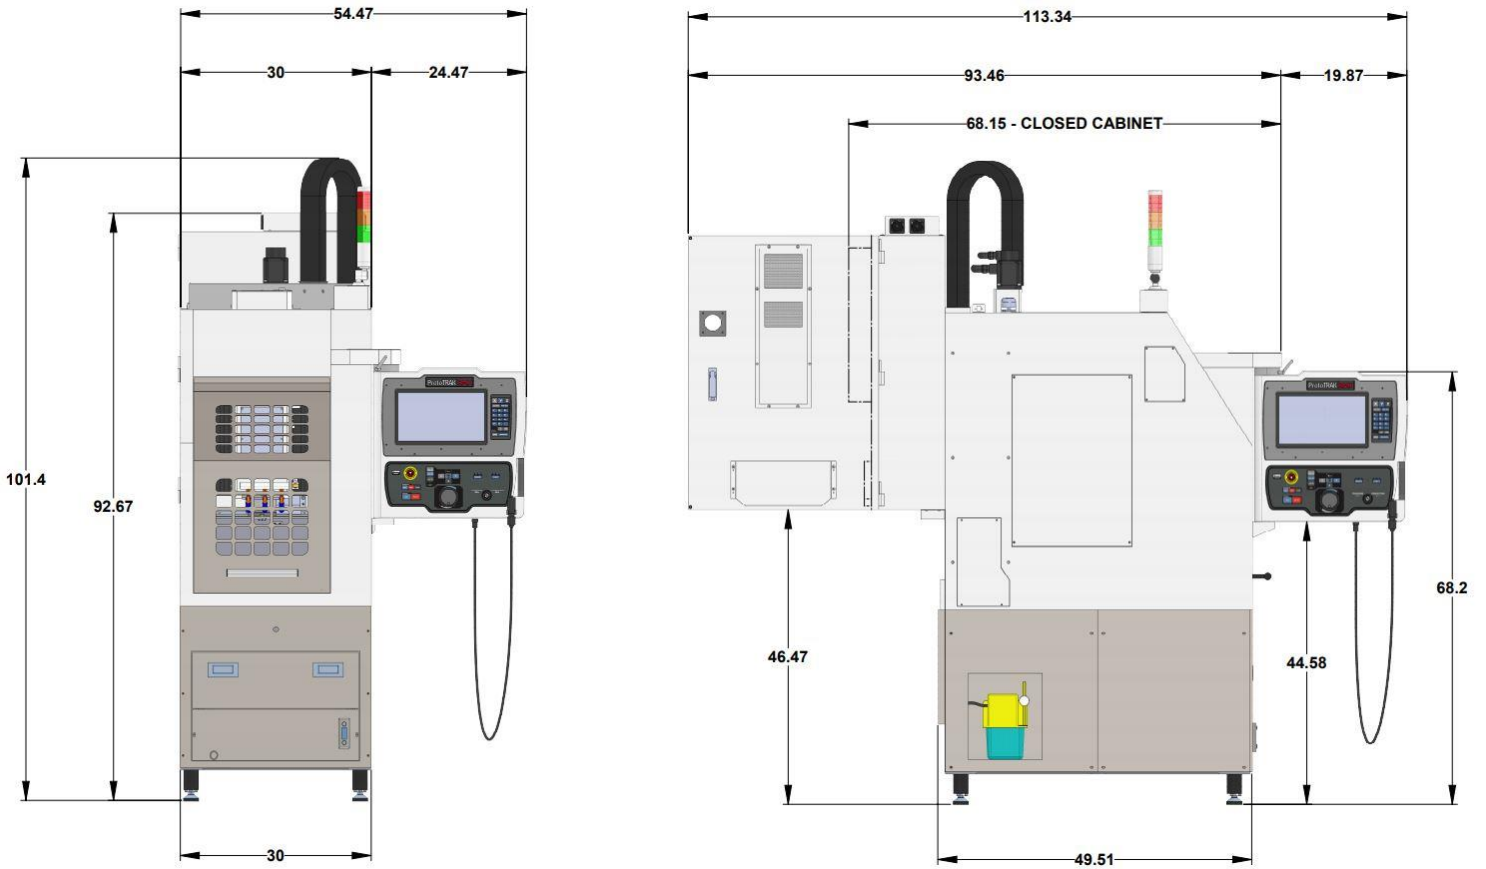


Figure 1 – Overall Dimensions of VMC2

TRAK Machine Tools
Site Preparation Guide
TRAK VMC2



Figure 2 – Lifting the VMC2



Figure 3 – Installing Leveling Pads

TRAK Machine Tools
Site Preparation Guide
TRAK VMC2



Figure 4 – Moving with Pallet Jack



Figure 5 – Electrical Quick Disconnect Plugs (Male)

TRAK Machine Tools
Site Preparation Guide
TRAK VMC2

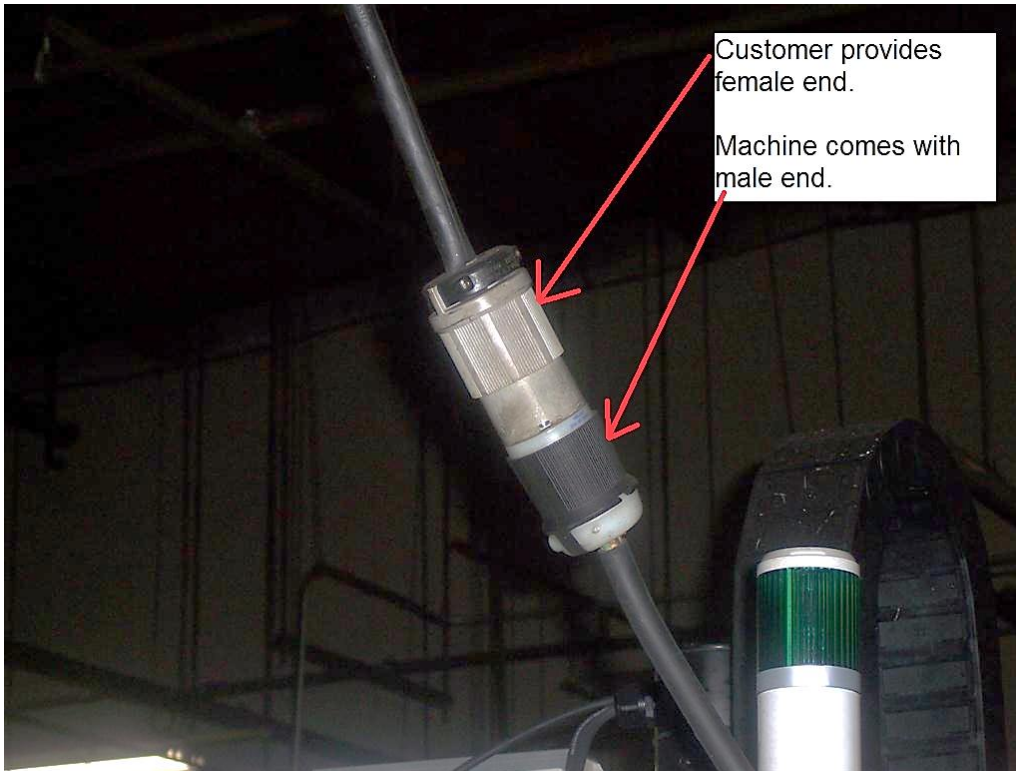


Figure 6 – Power Cable Example